


OVERVIEW

Access Doors are designed and built for years of convenient and easy access to mechanical areas in commercial buildings.

The following is a general instruction for installing Plastic Access Doors. These are recommended general guidelines only. Locally accepted practices and procedures should be followed to ensure the ultimate durability of access door installed in different types of construction.

INSTALLATION

1. Cut opening with drywall keyhole saw. This should be 1/4" larger than door size.

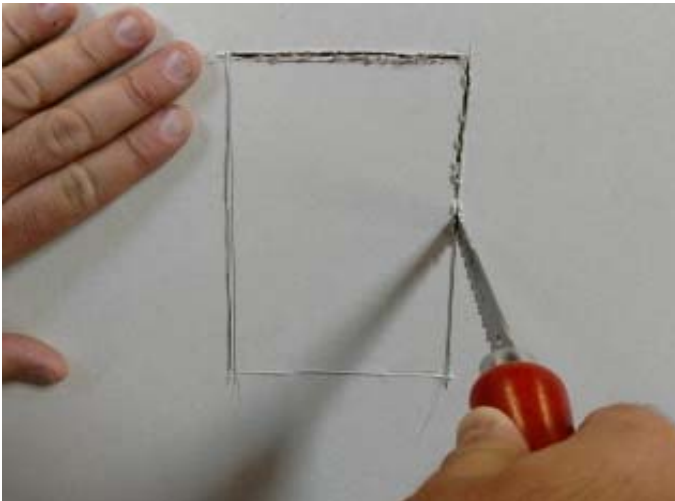

2. Remove door from frame and apply adhesive to backside of flange.



3. Mount frame into place ensuring plumb and level.



4. Install door panel to frame in opening.

